
Subject: Re: Kustom 100 blowing fuse
Posted by [steven](#) on Fri, 12 Apr 2019 16:32:29 GMT
[View Forum Message](#) <> [Reply to Message](#)

This is a differential output stage and preamp , meaning they run on and need a positive and negative supply voltage .
Your act of unhooking just the red wire (positive supply) may have done damage to the amp on its own.
