
Subject: Different Model number Designations
Posted by [GaryLC](#) on Fri, 07 Jun 2024 15:51:31 GMT
[View Forum Message](#) <> [Reply to Message](#)

Hi folks,

I know I've seen this here before, but can't find it. Can someone tell me what the different model number designations mean? There will be a dash number after the model, looks like 1 thru 8. I know it has something to do with what effects they have, etc.

Subject: Re: Different Model number Designations
Posted by [rodak](#) on Wed, 12 Jun 2024 23:10:28 GMT
[View Forum Message](#) <> [Reply to Message](#)

I think generally it's as-follows:

- 1 basic 2 channel, Bass/Treble/Bright Switch
- 2 Adds Reverb and Tremolo
- 3 Adds Selective Boost and Harmonic Sustain(?- aka fuzz)
- 4 Adds both features from -2 and -3
- 5 PA head - has four channels just like the -1, but adds reverb.

Also note that the K200A-4 is the "John Fogerty" model, where you can use all four effects on one channel. The somewhat later K200B-4 has the Reverb/Trem on one channel and Fuzz/Boost on the other. Can't use them together unless you use a Y cable to drive both channels at once.

I think this all mostly holds true for the K100 and K150/250 slant front models, but there may be variations.

Consult the catalog photos in the Literature section to be sure.
